



## INSTALLATION INSTRUCTIONS

# CHEVY SILVERADO LEVELING KIT



### \*\*Please Note\*\*

Spacer thickness to lift amount is not a 1 to 1 ratio

To raise the front 2" the spacer will be 1.33" thick.

To raise the front 2.5" the spacer will be 1.66" thick.

To raise the front 3" the spacer will be 2" thick.



#### WATCH INSTALL VIDEOS:

Scan this code with your phone to see a installation video or go to [www.youtube.com/c/MotoFabLifts](http://www.youtube.com/c/MotoFabLifts)

#### GETTING STARTED:

Jack up the front of the vehicle and support the vehicle with jack stands, make sure the front wheels are off of the ground. Remove the front wheels.



1

After removing the wheel, remove any brake line and ABS line brackets, so you have enough slack in the lines.



2

Use an 18mm wrench to remove the upper strut mount nuts and the upper ball joint nut. Strike the side of knuckle with a hammer to get the ball joint to separate.



3

Using a 21mm wrench, remove the steering linkage nut.

\*\*\*\*\*Spacer thickness to lift amount is not a 1 to 1 ratio\*\*\*\*\*

Limitation of Liability  
MotoFab or its affiliates shall not be liable for any damages or consequential damages that result from the use of or inability to use the materials on this product or the performance of the product. Even if MotoFab or its affiliates have been advised of the possibility of such damages. Applicable law may not allow the limitation of exclusion of liability or incidental or consequential damages. So the above limitation or exclusion may not apply to you.

Terms and conditions  
Please read the following terms and conditions of use before using this product. All users of this product are subject to the following terms and conditions and other applicable law. If you do not agree with these terms do not use this product. All parts of this product should be assembled or installed by a certified mechanic.

## IMPORTANT

# CHEVY SILVERADO LEVELING KIT

100% SATISFACTION GUARANTEED  
LIFETIME WARRANTY • MADE IN USA



\*\*\*\*\*Spacer thickness to lift amount is not a 1 to 1 ratio\*\*\*\*\*

QUESTIONS? CALL 800-430-8674




4

Remove the sway bar nut and bushing.



5

Remove the two lower strut mount bolts and remove the strut from the vehicle.

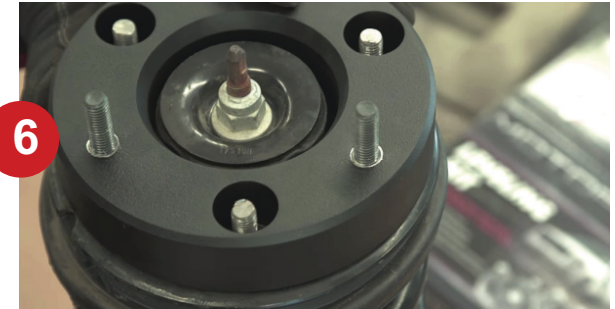

6

Install the supplied bolts into the leveling kit spacer. These will act as the new studs when reinstalled. Bolt the spacer to the top of the strut using the supplied nuts.


← Step #1 on front side



7


Rotate the strut 180 degrees and install it back into the truck. Re-insert the lower strut bolts.

\*\*The lower mount bushing will rotate to correct the angle\*\*

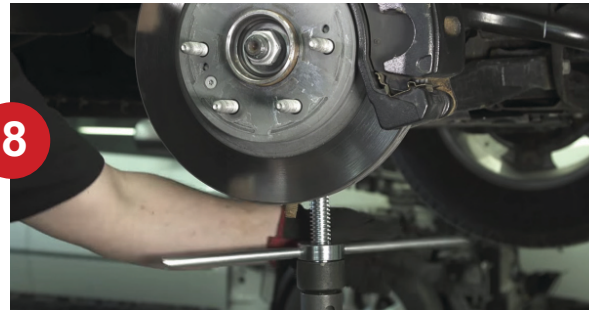

8

Raise the lower control arm to raise the spindle while lowering the upper control arm to re-install the upper ball joint and Re-install the steering linkage.

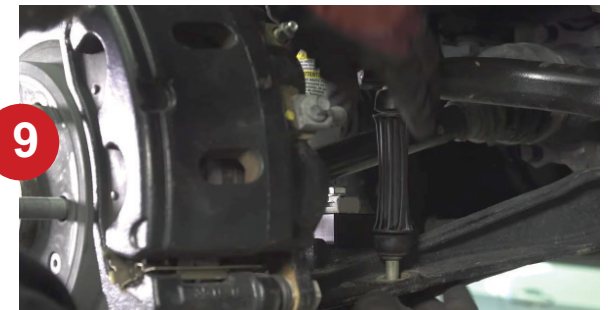

9

Complete the installation on the other side of the truck before reinstalling the sway bar nut and bushings.

\*\*\*\*\*Spacer thickness to lift amount is not a 1 to 1 ratio\*\*\*\*\*

\*\*\*A front end alignment back to factory spec is required after the install\*\*\*

**IMPORTANT:** BEFORE DRIVING THE VEHICLE MAKE SURE ALL HARDWARE IS TORQUED TO FACTORY SPECS.  
AFTER INSTALLING THE KIT, A THE TRUCK NEEDS TO BE ALIGNED BACK TO FACTORY SPEC.