


# MOTOFAB LIFTS

## Installation Instructions



Step 1: Using a small flat head screw driver pry open the cover to the front of the sun visor mount. This will expose the two factory mounting screws.

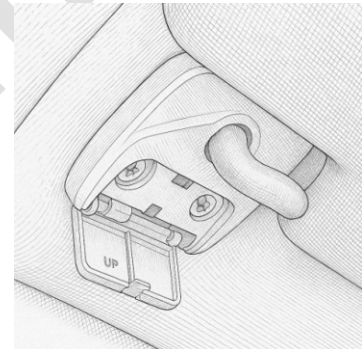

Step 2: Remove the cover and discard it.

Step 3: Remove the two factory screws.

Step 4: Place the new aluminum over the top of the holes and bolt it to the truck using the new longer screws.

Terms and conditions

**Please read the following terms and conditions of use before using this product**

All users of this product are subject to the following terms and conditions and other applicable law. If you do not agree with these terms do not use this product. All parts of this product should be assembled or installed by a certified mechanic.

### Limitation of Liability

MotoFab or its affiliates shall not be liable for any damages or consequential damages that result from the use of or inability to use the materials on this product or the performance of the product. Even if MotoFab or its affiliates have been advised of the possibility of such damages. Applicable law may not allow the limitation of exclusion of liability or incidental or consequential damages. So the above limitation or exclusion may not apply to you.