


MOTOFAB LIFTS

Installation Instructions

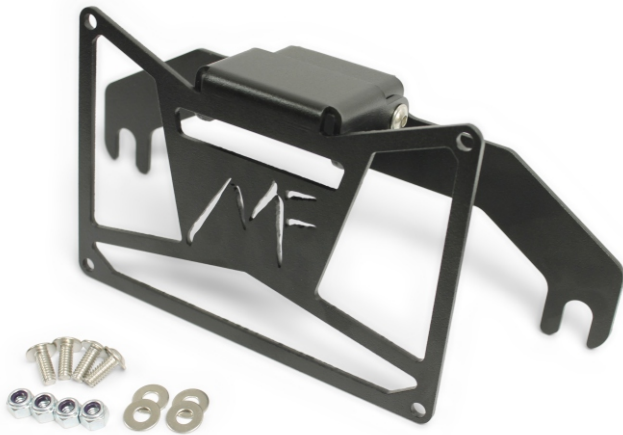

Mounting Procedure

Step 1: Fairlead Preparation loosen the two existing bolts securing the aluminum fairlead to the winch plate. Align the fairlead mounting bracket over the fairlead bolts. The slotted openings on the bracket fit around the shanks of the bolts, between the fairlead and the winch plate.

Step 2: Tighten the Fairlead Bolts and torque the fairlead bolts to the manufacturer's spec (typically 35–45 ft-lb for M12 bolts).

Step 3: Attach the license plate frame to the hinge bracket using the pivot bolts. Torque the bolts lightly to allow smooth flipping action without excessive play.

Step 4: Verify that the plate frame flips upward easily to provide winch access and locks down under its own weight. Mount license plate using the included stainless hardware.

Terms and conditions

Please read the following terms and conditions of use before using this product

All users of this product are subject to the following terms and conditions and other applicable law. If you do not agree with these terms do not use this product. All parts of this product should be assembled or installed by a certified mechanic.

Limitation of Liability

MotoFab or its affiliates shall not be liable for any damages or consequential damages that result from the use of or inability to use the materials on this product or the performance of the product. Even if MotoFab or its affiliates have been advised of the possibility of such damages. Applicable law may not allow the limitation of exclusion of liability or incidental or consequential damages. So the above limitation or exclusion may not apply to you.